

35 - 36
37 - 38
48



Ground Level



LX.2 74 73 72 71 70 69 68 67 66 65 64 63

49 - 39 - 40 - 41
42



Ground Level



LX.1 62 61 60 59 58 57 56 55 54 53 52 51

31 - 32 - 33
34 - 47



Stage Right FR (ground level)

Curtain Line

Stage Left FR (ground level)

43 - 44 - 45
46 - 50



FOH.1 30 29 28 27 26 25 24 23 22 21

179
175
176
177

111
106
107
108